




30A MPPT SOLAR CHARGE CONTROLLER USER MANUAL

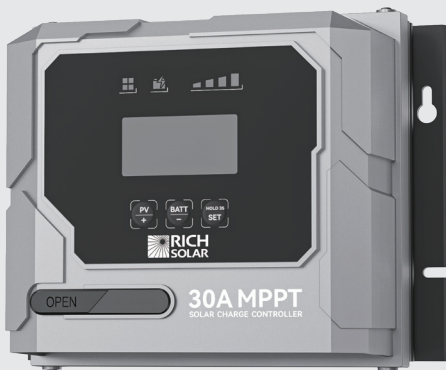

MODEL: RS-MPPT30PB

THIS MANUAL CONTAINS IMPORTANT SAFETY AND OPERATING INSTRUCTIONS FOR SOLAR CHARGE CONTROLLER. PLEASE READ THIS MANUAL AND FOLLOW THE INSTRUCTIONS EXACTLY.

02	Warning: Important, Please Read
03	Mounting and Installation
04	Wiring Connections
06	Operating – LCD Display
13	Charging Stages
15	LED Indications
16	Safety Protections
16	Maintenance
17	Specifications
20	Features and Advantages
21	App Quick Start Guide

Warning: Important, Please Read


Risk of explosive gases when working in the vicinity of a lead acid battery is dangerous. Explosive gases develop during normal battery operation. It is important that each time before using or connecting your solar controller:

- This charger is designed for indoor use only and should never be exposed to rain.
- Do not disassemble the controller. Take it to a qualified person if the unit requires repairing.
- Lead acid, LCO, LiFePO_4 , and LTO batteries can be dangerous. Ensure no sparks or flames are present when working near batteries.
- Eye protection should always be used. Never short-circuit the battery.
- Given sufficient light, solar panels always generate energy even when they are disconnected.
- Accidental 'shorting' of the terminals or wiring can result in sparks, causing personal injury or a fire hazard. We recommend that you cover the panel(s) with a soft cloth to block all incoming light during the installation. This will ensure that no damage is caused to the Solar Panel or Battery if the wires are accidentally short-circuited.
- Always install a battery fuse on each circuit, including the solar controller.
- Do not reverse connect the wires to the solar panel or battery.

Mounting and Installation

This solar controller is designed to be mounted against a wall, especially for caravan use, out of the way but easily visible, please note, mounted on a vertical surface to optimize cable placement and cooling of the unit, indoor use, protected from the weather.


The mounting dimensions

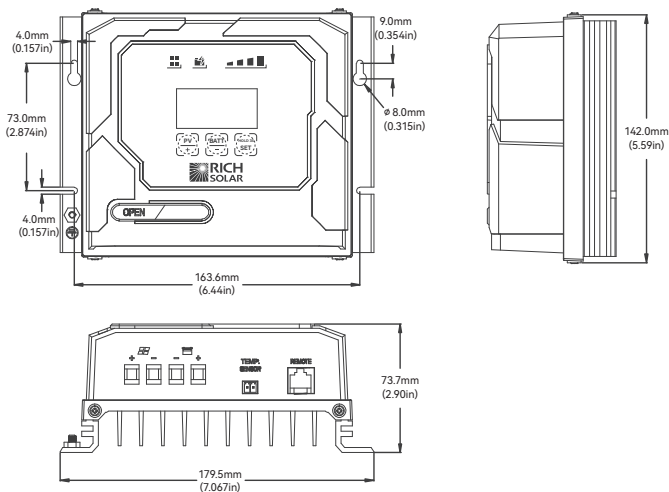

Wiring Connections

To protect the battery and the solar panel, we strongly recommend that you place an inline fuse on the positive wire on both the “solar” and “battery” circuits.

Refer to the drawing below, please cover the solar panel before connecting cables.

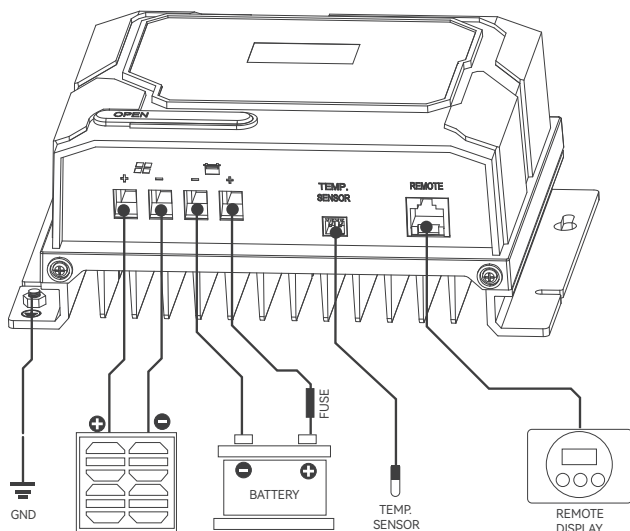


Correct Wire Size (stranded copper wire)

Please refer to the wire size chart below to determine the minimum size wire needed for each connection. This will also ensure you get the best performance out of your solar controller.

Rated current	The cable total length One-way distance	Solar panel -> Controller -> Battery		
		< 10ft	10-20ft	20-30ft
30Amp	The cable size (AWG)	10AWG	8AWG	6AWG

The solar controller should be installed as close to the battery as possible. Please do not reverse the connections with the solar panel and battery when installed the cables.

1. Using the terminals supplied, crimp the terminals on your solar array wires and connect to the solar panel.
2. Using the terminals supplied, crimp the terminals on your battery wires and connect to the battery.
3. Take off the rubber mask plate at OPEN end on the top face, you will see the four screws, loosen the screws.
4. Insert the input and output cables and firmly secure the cables to the solar controller via the screws.
5. Reinstall the rubber mask plate back to the solar controller as shown below.

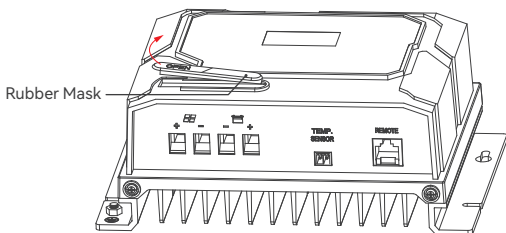

Once the connections are completed, the solar controller will start working automatically.

Operating – LCD Display

When the controller powers on, the unit will run self-qualify mode and automatically show the following items on LCD before going into charging process.

8888

Self-test starts, digital meter segments test

6002

Software version test

12V 30A

System battery voltage and current test

System battery voltage setting

Press and hold the **SET UP button** for 3 seconds to go into the system battery voltage setting mode, press **PV / +** or **BATT / - button** to select your desired system battery voltage 12V, 24V or AUTO, press the **SET UP button** again to confirm the battery voltage setting.

The display in sequence:



The controller will automatically memorize your previous battery voltage setting. If AUTO mode selected, the controller will automatically detect 12V or 24V battery connected.

System battery type setting

Please check your battery manufacturer's specifications to select correct battery type. The unit provides 8+1 battery types for selection: LCO, LTO, LFP, Crystal (Lead crystal), Gel, AGM, WET (Conventional lead acid) and Calcium (Calcium contented) battery, plus a Custom setting.

Follow up the battery voltage setting. Press the **SET UP button** to go into your battery type setting mode, the battery type you select will be flashed on the LCD meter, the default setting is AGM battery; the controller will automatically memorize your battery type setting.


Remarks: LCO battery type setting is only recommended for use with **3-SERIES** Lithium Cobalt Oxide (LiCoO_2) battery.

LFP battery shown on LCD indicates Lithium Iron Phosphate (LiFePO_4) battery.

LTO battery shown on LCD indicates Lithium Titanate Oxide ($\text{Li}_4\text{Ti}_5\text{O}_{12}$) battery.

Caution: Incorrect battery type setting may damage your battery.

Press **PV / +** or **BATT / -** button to navigate your desired battery type as below:

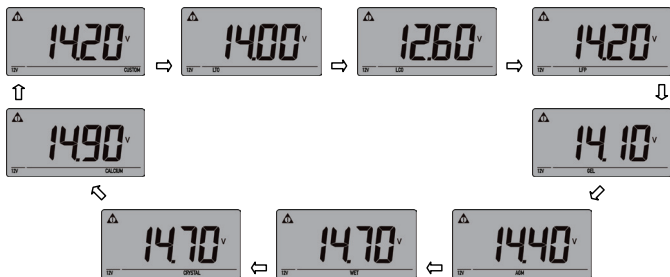


Press the **SET UP** button again, the selected battery type will be solidly displayed and confirmed.


Custom setting

This solar controller provides a CUSTOM mode to meet your special battery charging demand, the users can preset the Absorption voltage level and duration, Equalization voltage level, duration and periodical cycle, Float voltage level and Reset voltage level for your targeted battery charging parameters.


Alternatively display Absorption Voltage character **AbS.U** and voltage data when going into CUSTOM mode.




Absorption voltage setting range from 13.20V ~ 15.50V, press **PV / +** or **BATT / - button** for once +/- 0.05V variation, press the **SET UP button** again to confirm the Absorption voltage level you preset, then move to next Absorption duration setting.




Alternatively display Absorption Time character **AbS.T** and duration data; Absorption duration setting lasted from 5 – 500 minutes, press **PV / +** or **BATT / - button** for once +/- 5 minutes variation, press the **SET UP button** again to confirm the absorption duration setting, then move to next Equalization voltage setting.




Alternatively display Equalization voltage character **EqL.U** and voltage data; Equalization voltage setting range from 13.20V ~ 16.2V, press **PV / +** or **BATT / - button** for once +/- 0.05V variation, press the **SET UP button** again to confirm the Equalization voltage and then move to next Equalization duration setting.




Alternatively display Equalization Time character **EqL.T** and duration data; Equalization duration setting lasted from 5 – 500 minutes, press **PV / +** or **BATT / -** button for once +/- 5 minutes variation, press the **SET UP** button again to confirm the Equalization duration setting and then move to next Equalization periodical cycle setting.



Alternatively display Equalization periodical cycle character **EqL.P** and cycle day; Equalization periodical cycle day setting from 0 – 100 days, press **PV / +** or **BATT / -** button for once +/- 1 day variation, 0 indicates no Equalization setting; press the **SET UP** button again to confirm the Equalization periodical cycle setting and move to next Float voltage setting.



Alternatively display Float voltage character **FLT.U** and voltage data; Float voltage setting range from 13.00V ~ 14.00V, press **PV / +** or **BATT / -** button for once +/- 0.05V variation, press the **SET UP** button again to confirm the Float voltage and then move to next Reset / Restart setting.




Alternatively display Reset / Restart voltage character **rST.U** and voltage data; Reset voltage setting range from 12.50V ~ 13.50V, press **PV / +** or **BATT / - button** for once +/- 0.05V variation, press the SET UP button again to confirm the Reset / Restart voltage and all settings will be automatically stored.


Solar input parameter display

Once the settings are completed, the solar controller will automatically go into charging process, the LCD displays the parameters of solar input as below:


Press **PV / + button** in sequence, the LCD will display in turn with solar input voltage, current, power and kWh.

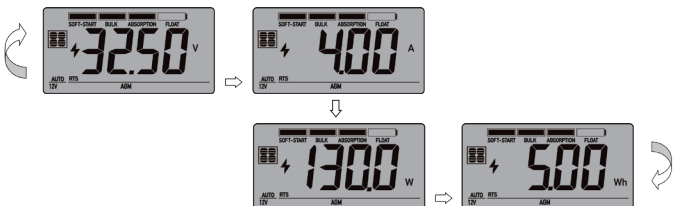


Press **BATT / - button** in sequence, the LCD will display in turn with battery voltage, charging current, charged capacity (Amp-hour) and battery temperature (if external temperature sensor connected).

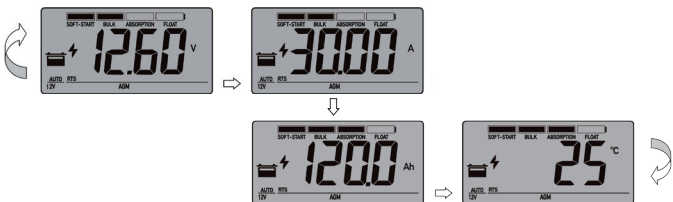

The users also can read the battery voltage as degree Celsius or degree Fahrenheit by pressing **SET UP button** for converting.



Alternatively display voltage and FUL when battery is fully charged.



You also can visually monitor your battery charging condition for each battery; there is an LCD bar to show the percentage of charge, you can easily see the battery is charged to 25%, 50%, 75% or 100%, and also roughly match each charging stage of Soft-start, Bulk, Absorption and Float.




The LCD also can be treated as an independent voltage meter or thermometer at night.

Charging Stages

This solar controller provides multiple charging stages with smart charging algorithm.


For Lead acid battery (Crystal, Gel, AGM, WET and Calcium battery):

Soft Start – Bulk Charge – Absorption Charge – Equalization Charge* – Float Charge

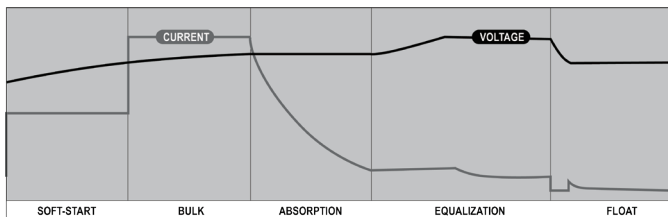

For Lithium battery (LCO, LFP, LTO battery)

Soft Start – Bulk Charge – Absorption Charge – Stop and Restart Charge*

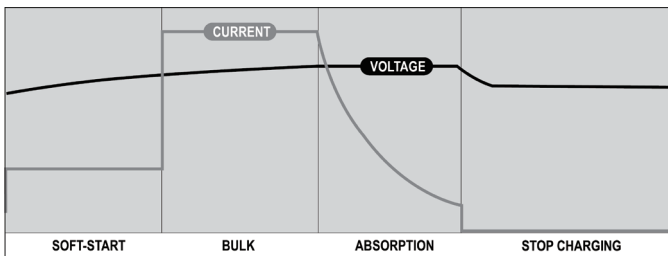

Soft Start –

When batteries suffer an over-discharge, the controller will softly ramp the battery voltage up to 10V.

Bulk Charge -

Maximum current charging until batteries rise to Absorption level.

For Lead crystal battery type, the charge controller will deliver two step level of Bulk charge, when the first level rises the battery voltage up to 14.4V, then switch into the second level of the 10% of the first bulk charge rate, until the Lead crystal battery voltage up to 14.7V.

Absorption -

Constant voltage charging and battery is over 85% for lead acid battery; the Lithium battery (LCO, LFP and LTO battery) will close fully charged after Absorption stage.

Equalization* -

Only for WET or Calcium battery type, when the battery is deeply drained below 11.5V, it will automatically run this stage to bring the internal cells as an equal state and fully complement the loss of capacity. (Lead crystal, Gel, AGM battery or Lithium batteries do not run Equalization charge)

Float Charge or Restart Charge* -


Battery is fully charged and maintained at a safe level.

A fully charged Lead acid battery (Crystal, Gel, AGM, WET or Calcium battery) has a voltage of more than 13.6 Volts; if the lead acid battery voltage drops to 12.7V at Float mode, it will return to Bulk charge; Lithium battery will stop charge after Absorption stage, it will restart to Bulk charge; if the voltage discharge less than 12.0V for LCO battery, 13.0V for LTO battery, 13.3V for LFP battery.

Remarks:

The solar controller checks the lithium battery's initial voltage to determine whether it should go to Soft-start or Bulk charge; if the Lithium battery is protected by BMS due to over-discharged, the solar controller will automatically send a signal periodically to the battery terminals to activate the BMS against protection. In case the battery is hooked to a load and

BMS is not able to be successfully activated, the solar controller is also provided a BMS activation method by manual: Press **BATT / - button** for 3 seconds to wake it up. During the period of the BMS activation by manual, the LED bar will rotate to move on LCD display.




LED Indications

Normal charge

LED indications						
LED Color	GREEN	BLUE	WHITE	WHITE	WHITE	WHITE
Soft-start	ON	FLASH	FLASH	OFF	OFF	OFF
Bulk charge	ON	ON	ON	FLASH	OFF	OFF
Absorption / Equalization	ON	ON	ON	ON	ON	FLASH
Float charge	ON	OFF	ON	ON	ON	ON

Abnormal charge

Solar panel abnormal mode	LCD display	LED indication	LCD backlight
Solar panel weak (< 15V)	/	 Flash  ON	ON
Solar panel reverse connection		 Flash  ON	Flash
Solar panel over voltage (> 95V)		 Flash  ON	Flash

Battery abnormal mode	LCD display	LED indication	LCD backlight
Solar panel connected, battery disconnected		 Flash	Flash
Battery reverse connection		 Flash	Flash
Battery over voltage (> 17V)		 Flash Flash Flash Flash	Flash
Battery temperature over 65°C/149°F		 Flash Flash Flash Flash	Flash
The controller over-temperature protection is abnormal		 ON	Flash

Safety Protections

- Reverse polarity protection for solar and battery connections.
- Against reverse current from battery to solar panel at night.
- Over-temperature protection with charging current de-rate.
- Transient overvoltage protection, a variety of transient voltage suppressor (TVS) at the solar input and battery output against surge voltage.

Maintenance

Occasionally, clean the case using a damp cloth and mild cleaning agent. Check with terminals without loose, rusty; If connecting cable is damaged, replace the cable by qualified person.

Specifications

Electrical parameters

Maximum PV open circuit voltage at -20°C / -4°F	100 VDC
Maximum normal input PV voltage at 25°C / 77°F	92 VDC
Maximum PV input current	30 AMP
Maximum PV short circuit current	35 AMP
Maximum rated charging current	30 AMP
Maximum conversion efficiency	98 %
Minimum tracking efficiency	99.5 %
Maximum recommended PV input power	500 Watt (12V) / 1000 Watt (24V)
Self-consumption from battery when PV is disconnected	12±0.5 mA
Maximum output open circuit voltage when battery is disconnected	0.5 VDC
Maximum MPPT voltage range	15-72±0.5 VDC

Charging characteristics

Minimum battery start charging voltage	5 VDC
Soft start charging voltage	5-10±0.2 VDC
Soft start charging current	15 AMP
Maximum bulk charge	30 AMP
Absorption charging voltage at 25°C / 77°F	
-- LCO battery	12.6±0.2 VDC
-- LTO battery	14.0±0.2 VDC
-- LFP battery	14.2±0.2 VDC
-- Gel battery	14.1±0.2 VDC
-- AGM battery (default setting)	14.4±0.2 VDC
-- WET battery	14.7±0.2 VDC
-- Lead Crystal battery	14.7±0.2 VDC
-- Calcium battery	14.9±0.2 VDC
-- Custom setting range	13.2-15.5±0.2 VDC

Absorption transits to Equalizing or Float / Stop condition	
-- Charging current drops to	1.5±0.1 AMP
-- or Absorption charging timer timed out for Lead acid battery	4 Hour
-- or Absorption charging timer timed out for Lithium battery (CV1+CV2)	4 Hour
Equalization charging activation	
-- Only for WET or Calcium battery	
-- Battery voltage discharged less than	11.5±0.2 VDC
Equalization charging voltage at 25°C / 77°F	15.5±0.2 VDC
Equalization charging timer timed out	2 Hour
Equalization charging voltage for CUSTOM setting	13.2-16.2±0.2 VDC
Float voltage (for Crystal, Gel, WET, AGM and Calcium battery) at 25°C / 77°F	13.6±0.2 VDC
Custom setting range for Float charge	13.0-14.0±0.2 VDC
Restart voltage	
-- for Crystal, Gel, WET, AGM and Calcium battery	12.7±0.2 VDC
-- for LCO battery	12.0±0.2 VDC
-- for LTO battery	13.0±0.2 VDC
-- for LFP battery	13.3±0.2 VDC
-- for CUSTOM setting range	12.5-13.5±0.2 VDC
Voltage control accuracy	± 1%
Battery temperature compensation coefficient	-24 mV/°C
The temperature compensation range for Lead acid batteries	-10~+50 °C / 14 ~ 122 °F
Electrical parts	
Input output terminal	Rated 50A connector
Physical parameters	
Controller material	Plastic (PC)

Mounting	Surface mounting
IP grade	IP43
Net weight	0.8 kg / 1.76 lb

Environmental characteristics

Operating temperature	-25 ~ 50°C / -13 ~ 122 °F
Storage temperature	-40 ~ 85°C / -40 ~ 185 °F
Operating humidity range	0-85% RH

Remarks: Battery Voltage settings for 12V mode, x2 for 24V mode.

Features and Advantages

- PV open circuit voltage up to 100V.
- The latest Maximum Power Point Tracking (MPPT) algorithm.
- Unique multiple peaks detection technology for maximum power point tracking.
- MPPT tracking efficiency above 99.5%.
- Wider MPPT operating voltage range.
- Common negative grounding connection.
- Suitable for most rechargeable batteries, with up to 8 battery types preset plus a custom setting.
- Extensive internal electronics in-circuit protection.
- Reliable operating safety protection: overcharging or undercharging protection, short circuit protection, reverse polarity protection, thermal protection.
- Automatically detect 12V or 24V DC system voltages.
- Unique and concise LED bar to indicate the solar status and battery charging condition.
- Large and informative display interface to show solar parameter, battery charging parameter, battery type, battery temperature, custom presetting and faulty codes, etc.
- Provides external battery temperature sensor (Optional).
- Splash proof IP43.
- Rubber mask for connecting terminals protection.
- Conformal coating for internal boards.
- Designed to meet UL 1741 requirements and comply with applicable CE, FCC, and RoHS requirements.

App Quick Start Guide

DOWNLOAD THE APP

1. iOS users can search for “RICH SOLAR” in the App Store or scan the QR code below to download the app.




Scan the QR Code

2. Android users can search for “RICH SOLAR” in the Google Play Store or scan the QR code below to download the app.



Scan the QR Code

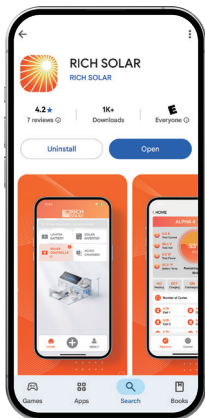

- After installation, open the RICH SOLAR App and allow Bluetooth access when prompted.
- If the app fails to find the device, ensure the device is on and your phone's Bluetooth is enabled. Then reopen the app or restart your phone's Bluetooth and search again.

APP TUTORIAL VIDEO



Scan the QR code to watch the app tutorial video

 1-800-831-9889

 support@richsolar.com

 www.richsolar.com

 1900 Mountain Ave, Norco, CA 92860

V1.0